



Install your SSD module

The TrendAI™ TippingPoint™ SSD module is a replacement unit and can only be used with the following TippingPoint Threat Protection System (TPS) devices:

- 8200TX
- 8400TX
- 5500TX

You cannot use the SSD module as a standalone product.

The replacement SSD kit includes the following items:

- SSD module
- Documentation

SSD module

The TPS TX Series devices include a single SSD module.

Figure 1. TX Series device - replacement SSD module



Determine the SSD module is faulty

Before you begin, determine the SSD module is faulty and needs to be replaced. When the SSD module fails, the system generates a warning or critical alarm message in the System log.

To verify the state of the SSD module, run the `show health storage` CLI command, and then review the `/user` disk information. For more information about this command, see the *Command Line Interface Reference*.

Install the replacement SSD module

Follow these steps to replace the SSD module. Although the SSD module is hot-swappable, the SSD module is not designed to be removed on a regular basis.

If you replace the SSD module while the device is turned off, be sure to also restore power to the device so that you can mount the replacement disk. Failure to mount the replacement disk prevents the device from automatically mounting the disk when the device is rebooted.

Important: Failure to properly remove the TippingPoint SSD module can result in disk corruption and a system error.

You can also enable encryption on the external user disk to secure its contents with the system master key. By default, the external user disk is not encrypted.

To install the replacement SSD module

1. If the device is turned on, enter the following CLI command to unmount the user disk:
`user-disk unmount`
2. From the front of the device, unscrew the fastener on the left side of the SSD module, and then pull the SSD module from its slot.
3. Set the faulty SSD module aside.
4. Remove the new SSD module from the packaging.
5. Align the new SSD module with its open slot and then slide the unit in until it is seated in the connector.
6. Tighten the fastener to lock the SSD module in place.
7. With the device turned on, mount the user disk so that the device can access the SSD file system.
 - To mount the user disk, enter the following CLI command:
`user-disk mount`
 - To verify the user disk is mounted, enter the following CLI command:
`show user-disk`

After you mount the user disk, the device can automatically mount the disk when you reboot the device.

TMC account registration

The TMC provides online access to additional product documentation, updates, and support.

To register for an account, go to <https://tmc.tippingpoint.com>.

Product support

Information for you to contact product support is available on the TMC at the [Contact Support](#) site.

Legal and notice information

TrendAI™ Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available from the TrendAI™ website at:

<https://docs.trendmicro.com/en-us/tippingpoint/threat-protection-system.aspx>

TrendAI™, the Trend Micro t-ball logo, TippingPoint, and Digital Vaccine are trademarks or registered trademarks of TrendAI™ Incorporated. All other product or company names may be trademarks or registered trademarks of their owners.

Copyright © 2024. TrendAI™ Incorporated. All rights reserved.

Install your SSD module

Edition: August 2024, Rev A2